 




WOODSCAN HORNET RECHARGEABLE ELECTRIC AIR HORN

Thank you for purchasing a Hornet rechargeable electric air horn!

Please read these instructions and look at these images carefully before using your Hornet rechargeable air horn.



1 PLUG THE BATTERY CHARGER INTO AN ELECTRICAL OUTLET. THE CHARGER CAN BE USED WITH A 110 OR 220 VOLT AC SOURCE.



2 PLUG THE BATTERY CHARGER INTO THE HORNET AIR HORN.




3 A RED LIGHT WILL APPEAR ON THE BATTERY CHARGER INDICATING WHEN THE HORNET IS BEING CHARGED.



4 A FULL BATTERY CHARGE WILL TAKE THREE HOURS. WHEN FULLY CHARGED, THE LIGHT ON THE BATTERY CHARGER WILL CHANGE FROM RED TO GREEN.



5 UNPLUG THE BATTERY CHARGER FROM THE HORNET AIR HORN.

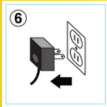

6 UNPLUG THE BATTERY CHARGER FROM THE WALL OUTLET.



7 WHEN USING THE HORNET AIR HORN, IT IS STRONGLY RECOMMENDED THAT EAR PROTECTION IS USED.



8 PULL THE TRIGGER TO ACTIVATE THE HORNET AIR HORN. IT WILL OPERATE FOR UP TO 35 MINUTES ON ONE BATTERY CHARGE AND CAN BE RECHARGED UP TO 500 TIMES.

CAUTION THE HORNET AIR HORN IS NOT WATERPROOF SO IT CANNOT BE IMMERSSED IN WATER. IT IS SPLASH-RESISTANT.

CAUTION AVOID DROPPING THE HORNET ONTO HARD SURFACES AS IT MAY DAMAGE THE DEVICE EITHER INTERNALLY OR EXTERNALLY, RENDERING IT INOPERABLE.

CAUTION PUTTING OBJECTS INTO THE OPENING OF THE TRUMPET CAN DAMAGE THE MECHANISM THAT GENERATES THE SOUND, RENDERING THE HORNET INOPERABLE.



Please note that we strongly recommend wearing hearing protection when using this device as the sound generated is extremely loud (121 decibels).



1-250-881-2557



www.woodscan.com